



# ARCADIS Avantic


syn<sup>go</sup>  
speaking

## VB 13C







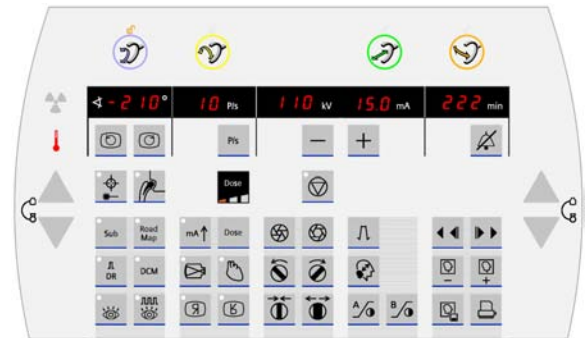








## Quick Guide

**SIEMENS**  
medical
 
## C-arm control panel




### upper/lateral keys

				Brakes for C-Bogen movement orbital, angular, horizontal longitudinal, horizontal swivel		
		Lift/lower C-arm				Rotate image
	Switch laser light localizer on/off				Switch metal function on/off	
	Set pulse rate					Reduce/enlarge kV/ mA
	Control stop (ADR stop)				Switch off acoustic- warning signal	

### lower keypads

		- Subtraction - Roadmap - Digital radiography - Digital Cine Mode			- Continuous fluoroscopy - Pulsed fluoroscopy
	Switch Power Mode on/off				Select dose level (with display)
	Set zoom factor for live image				Selecting the noise reduction factor
		Image reversal horizontal, vertical			Open, close iris diaphragm
		Rotate slot diaphragm			Open, close slot diaphragm
	Set degree of edge enhancement				Enlarge/reduce saved images (zoom in/out)
	Contrast adjustment for left/right monitor				Digital Cine Mode review (DCM)
		Read image from memory forw., backw.			Save, print image

# Monitor trolley symbol keypad

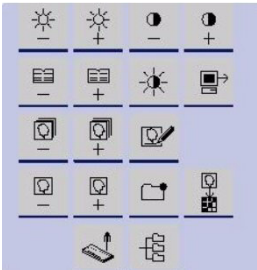

		Brightness -/+	
		Contrast -/+	
		Scroll to previous/next study	
		Scroll to previous/next series	
		Scroll to previous/next image	
	Switch between negative and positive image		Send to network node 1
	Enter a study comment		Mark image
	Copy to film sheet		Call up Patient Registration
	Select Patient Browser		



This product is provided with a CE marking in accordance with the regulations stated in Directive 93/42/EEC of June 14th, 1993 concerning medical devices.

The CE marking applies only to medical devices which have been put on the market according to the above-mentioned EC Directive.

The original language of this document is German.

This Quick Guide is available in German, English, French, Italian and Spanish.

We welcome you as a user of the powerful ARCADIS Avantic C-arm system from Siemens.

This clearly laid out Quick Guide is intended to guide you through the operation of the system.



The Quick Guide is valid only in conjunction with the Operator Manuals and the safety information they contain:

- ☐ Please observe the Operator Manual and all supplements/addenda
- ☐ Please observe all safety information





 
The right-hand pages contain step-by-step instructions corresponding to the typical workflow in the OR.





The pages to the left contain illustrations and supplemental notes.

The description focuses on easy and fast operation of the ARCADIS Avantic from start-up through to shutdown of the system including optional functions such as connection to a hospital network or subtraction.

More detailed and complete descriptions can be found in the ARCADIS Avantic Operator Manual.

# Table of Contents



	Principles	
	Input devices .....	7
	syngo user interface .....	9
	syngo control elements .....	11
	Product overview	
	C-arm system .....	13
	Monitor trolley .....	19
	Examination procedure	
	Preparing the system .....	21
	Patient registration .....	23
	Preparation in the Examination task card .....	25
	Radiation release and dose display ....	27
	Power mode .....	31
	Image rotation and reversal .....	33
	Collimator setting .....	35
	Image Quality .....	37
	Changing the contrast .....	39
	Saving images .....	41
	Fluoro Loop/LSH (option) .....	43
	Ending the examination .....	43
	Subtraction and Roadmap	
	Performing a subtraction scene .....	45
	Postprocessing a subtraction scene ..	47
	Roadmap .....	55
	Postprocessing	
	Loading patient images into the Viewing task card .....	57
	Image display .....	59
	Measuring and annotations .....	61
	Image manipulation .....	65

	Documentation	
	Printing .....	69
	Burning CDs .....	79
	Reports	
	Generating reports .....	81
	Opening and printing reports .....	83
	Connectivity	
	Send/Storage Commitment .....	87
	Get Worklist .....	91
	MPPS – Modality Performed Procedure Step .....	93
	Query/Retrieve .....	95
	Dismantling	
	Transport position .....	97
	Switching off .....	97

# Principles



This chapter is addressed to *syngo* beginners and users with little computer experience.

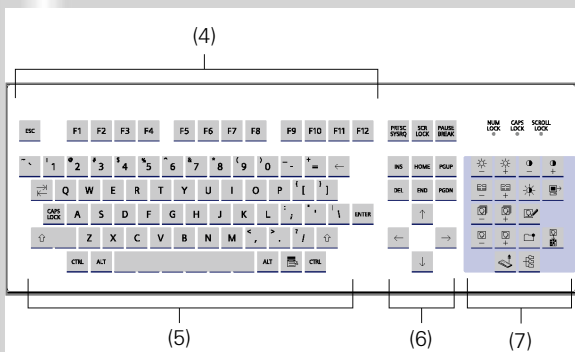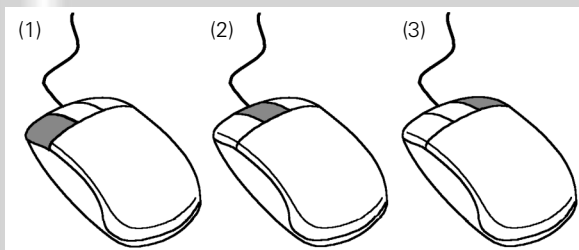

Functions of the symbol keypad see fold-out cover.

This chapter provides you with basic information on the input devices of the computer at the monitor trolley and on the *syngo* user interface.

## Input devices

---

### The mouse

- (1) Left button
  - Single click: select/mark
  - Double click: load data/program
  - Button kept pressed: drag/move
- (2) Middle button
  - Button kept pressed: windowing (change brightness and contrast)
- (3) Right button
  - Single click: call up popup menu (context-sensitive)


### The keyboard

- (4) Function keys
  - F1 = *syngo* Online Help
- (5) Alphanumeric keypad
  - Text input, e.g. patient data
- (6) Cursor keypad
  - Movement of the mouse pointer in texts
- (7) Symbol keypad
  - Direct selection of important *syngo* functions (e.g. calling up Patient Registration or local database; image postprocessing functions)

# Principles



After the ARCADIS Avantic system has been switched on, the *syngo* user interface automatically appears on the monitor trolley screens.

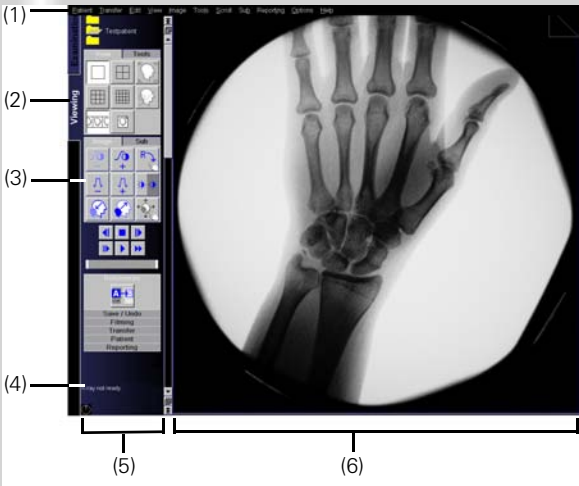



## **syngo user interface**

---

*syngo* consists of several stacked task cards. These are assigned to the individual steps of the workflow.

### **Task cards**

- (1) Menu bar  
Calling up of main menus and submenus
- (2) Tabs  
Selection/switching of task cards
- (3) Stack of subtask cards  
Selection of processing tools and display functions  
Switching of subtask card via tab
- (4) Status bar  
Display of system messages
- (5) Control area  
Display of image and examination parameters, selection of functions (via subtask cards)
- (6) Image area  
Display and processing of images


### **Windows/Dialogs**

Windows are called up separately or displayed automatically.


Windows can be closed again after processing.

- (7) Title bar  
Name of window, "Close window" button
- (8) Window content  
Input and selection of data
- (9) Softkeys/buttons  
Confirmation or cancellation of actions and messages

# Principles

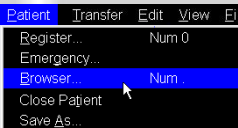


(1)

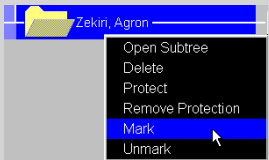

(2)



 
(3)




(4)



(5)

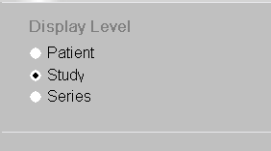


(6)

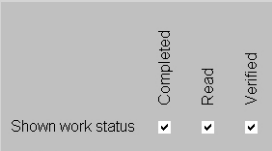

(7)



 (8)



(9)



(10)

## **syngo control elements**

---

Control elements on the screen are easiest selected with the mouse.

### **Menus**


- (1) Main menu  
Opens by pressing left mouse button
- (2) Popup menu  
Opens by pressing right mouse button  
The content depends on the mouse position ("mouse focus") on the screen

### **Input elements**


- (3) Text input field
- (4) Selection list  
Selection of preset parameters and data;  
opens via arrow
- (5) Spin box  
Setting of values with arrow keys
- (6) Radio buttons  
Only one option selectable
- (7) Check box  
Several options selectable

### **Icon buttons**

- (8) Dimmed  
Function not selectable
- (9) Inactive  
Function selectable, but not active
- (10) Active  
Function activated

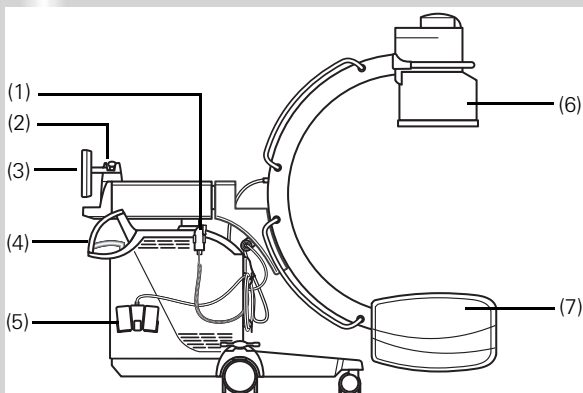

As soon as you press the emergency stop button, motorized up and down movement of the C-arm system is disabled.

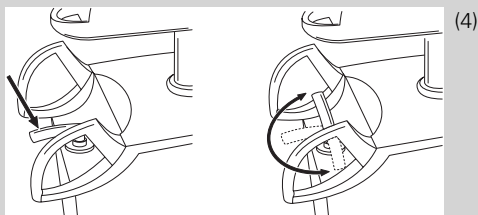

(8)



## C-arm system

---

### C-Arm

- (1) Hand switch
- (2) Emergency stop
- (3) Control panel
- (4) Steering lever
- (5) Holder for footswitch
- (6) Image intensifier
- (7) X-ray tube





### Steering

- (4) Steering lever
  - ☐ Steering lever straight:  
Move C-arm system straight ahead
  - ☐ Steering lever set to the left or right:  
Move C-arm system in transverse direction e.g. parallel to the table

### Brakes

- (8) Electromagnetic brakes on the control panel and optional remote control unit
  - ☐ Brake for the desired direction of movement released (display of open lock):  
Move C-arm system

# Product overview

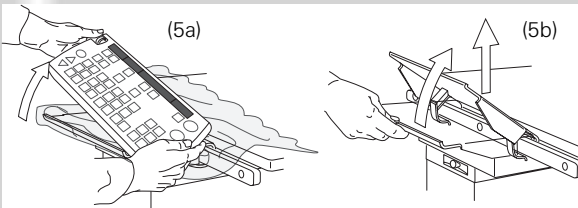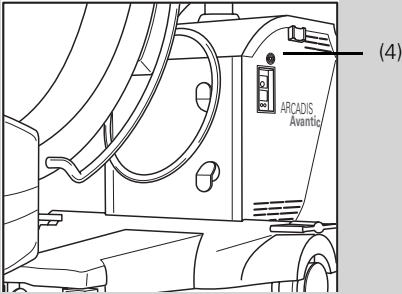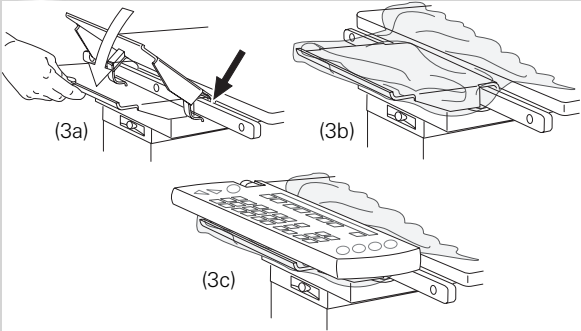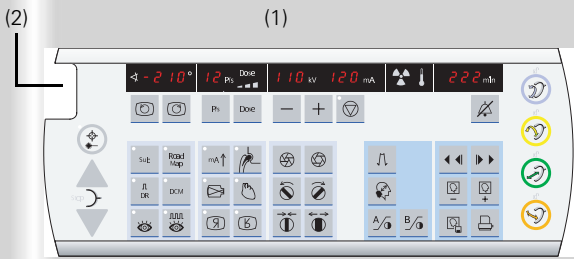


## Remote control unit (option)


The remote control unit is used in the same way as the control panel on the C-arm system.

- (1) Displays and buttons of the remote control unit
  - (2) Integrated EMERGENCY STOP button
  - (3) Installation on the patient table
    - (a) Fit the adapter plate diagonally on the table railing and fold it down (engages)
    - (b) Pull the sterile patient drapes over the adapter plate
    - (c) If necessary, put the remote control unit in the sterile cover provided and mount it (attaches magnetically)
  - (4) Connection on the C-arm system (above monitor trolley connector)
  - (5) Removal from the patient table
    - (a) Remove the remote control unit by slightly tilting it to the side
    - (b) Fold the adapter plate up again and pull it off.
- Storage on the side of the monitor trolley: Attach the remote control unit magnetically. Fit the adapter plate diagonally in the railing holder and fold it all the way down.


(1)

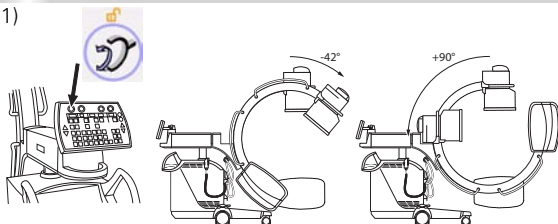

(2)

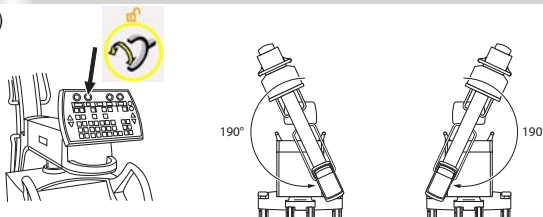

(3)

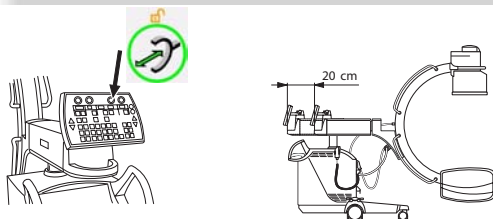

When moving the support arm from the outer area (12 – 0) into the collision area (0 – 8), you will have to override a slight resistance at the 0 position (safety stop).



## Moving the C-arm system

Release the brakes to perform the following movements.

### (1) Orbital movement

Change between a.p. and lateral position

- Starting from the basic position ( $0^\circ$ ), the C-arm swivels up to  $+90^\circ$  or up to  $-42^\circ$  ( $132^\circ$  in total).

### (2) Angulation

Rotate C-arm about support arm in vertical plane

by up to  $190^\circ$  in both directions.


### (3) Horizontal travel

Move C-arm horizontally  
up to 20 cm



- Ideal for fine adjustments directly at the OR-table.

# Product overview

(1)

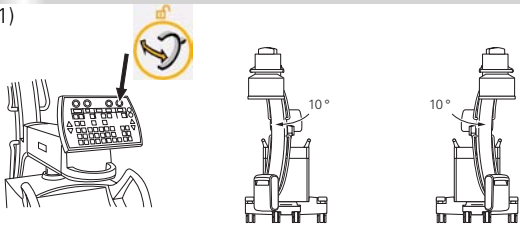

(2)

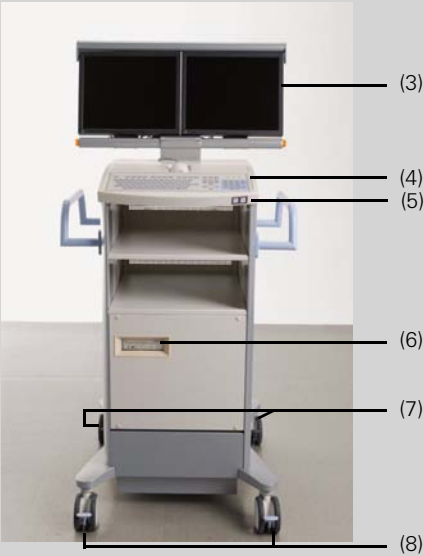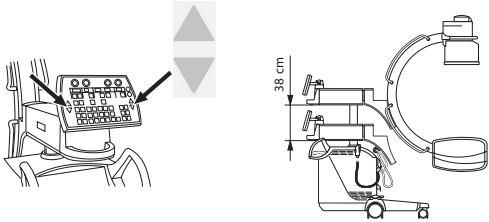

Description of keyboard see Basics chapter.



- (1) Swivel  
Swivel C-arm about unit column in horizontal plane  
by up to 10° in each direction
  
- (2) Vertical travel (motorized)  
Lift and lower C-arm  
up to 38 cm
  
- Ideal for fine adjustments directly at the OR-table.

## Monitor trolley


---

- (3) TFT flat screen monitors
- (4) Keyboard
- (5) Power on/off switch
- (6) CD drive
- (7) Direction locks on the back wheels
- (8) Brakes on the front wheels

# Examination procedure

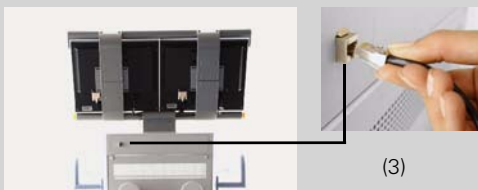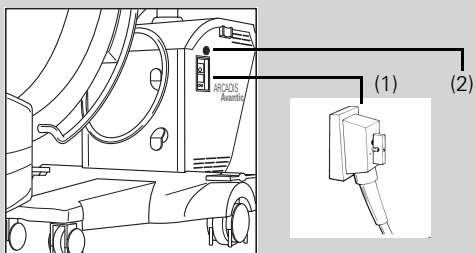

If an additional access control mechanism is configured for the system, you have to log in with your name and password.

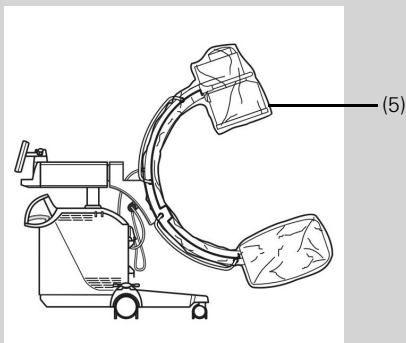

## Preparing the system

---

### Connecting, switching on and booting

- ✧ Connect the monitor trolley connecting cable to the C-arm system (1).
- ✧ If necessary, plug in the cable of the remote control unit (2).
- ✧ If available, connect the network cable (if the system is connected to an information system or network printer) (2).
- ✧ Plug the power plug into the power outlet.
- ✧ Switch on the C-arm system at the monitor trolley (3).
- ✧ The system boots.

### Covering the C-arm with sterile covers

- ✧ If necessary, cover the C-arm, e.g. with the three-part sterile cover (4).

# Examination procedure



During operation, the window can be opened by pressing the **Patient Registration** icon button on the monitor trolley.



(1)

Exam

(2)

(3)

## Patient registration

---

First, the **Patient Registration** window (1) appears directly.

(*Here*: maximal configuration)

- ✧ Enter the patient data into this mask (1).

At a minimum, the bold fields must be filled out.

- ✧ Using the mouse, click on the **Exam** (2) button.

- The patient data appear in the **Examination** task card (3).

- The unit is now ready to start an examination.

## Alternatives

- ☐ Preregistration/Scheduler

The patient has already been registered in the Scheduler, from where it can be loaded into the **Patient Registration** card.

- ☐ Emergency

If the patient data are unknown, the patient is assigned a provisional number consisting of the date and the time of the entry. These data can later be corrected.


- ☐ Search

If an information network (e.g. hospital network) is connected, you can start a search for registered patients here.



## Examination procedure



To select parameters, use the mouse to click the monitor trolley.

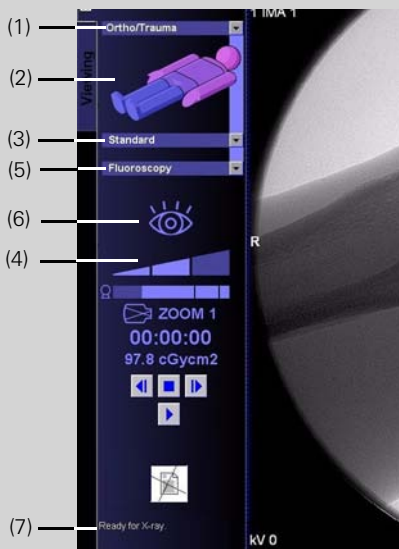

If the optional laser light localizer is available, the object should be positioned with the laser light localizer, i.e. without radiation, as far as possible for reasons of radiation protection.

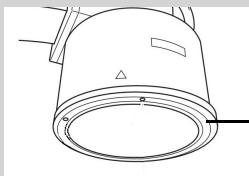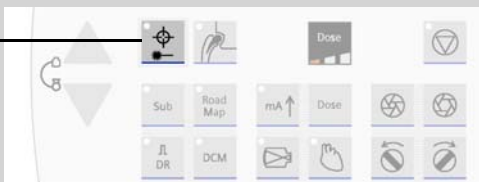

(9)



## Preparation in the Examination task card


---

- ✧ Select the medical application area (1).
- ✧ Select the body region by clicking the VPA (Virtual Patient Anatomy) (2).
- ✧ Select the required application program (3).
- With the application program you simultaneously select a dose level (reduced, standard, increased). This is shown by a bar (4).
- ✧ Select the desired operating mode (5).  
*Alternative:* Select/switch operating mode on the C-arm keyboard (see cover) or using the optional multifunctional foot-switch (→ Page 27).
- The selected operating mode is shown as a symbol (6).
- The readiness of the C-arm is shown in the status bar (7).

## Setting with the laser light localizer

- ✧ Press the button on the C-arm system (8).
- Depending on your system version, either the I.I. laser aimer (9) (option) and/or the single-tank laser targeting device (option) is switched on.


# Examination procedure

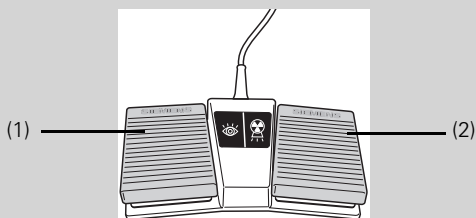


If required, the footswitch assignment can be changed by Siemens Service.



*Exception:* If continuous fluoroscopy is set, pressing the footswitch releases a single exposure.

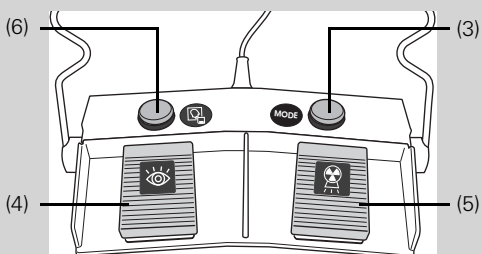

*Exception:* If continuous fluoroscopy is set, pressing the footswitch releases a single exposure.

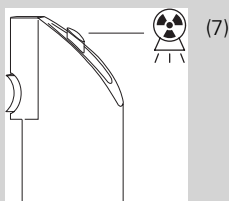

## Radiation release and dose display

---

### Radiation release with the footswitch

- ✧ Actuate the footswitch marked with the fluoroscopy symbol (1).
- Continuous fluoroscopy is released.
- ✧ Actuate the other footswitch (2).
- The set operating mode is activated.


### Radiation release with the multifunctional footswitch (option)

- ✧ To change the operating mode set, press the operating mode button (3) several times.
- ✧ Actuate the footswitch marked with the fluoroscopy symbol (4).
- Continuous fluoroscopy is released.
- ✧ Actuate the other footswitch (5).
- The set operating mode is activated.
- Storage of the images displayed with the save button (6).

### Radiation release with the hand switch


- ✧ Press the release button to release the set operating mode (7).

# Examination procedure

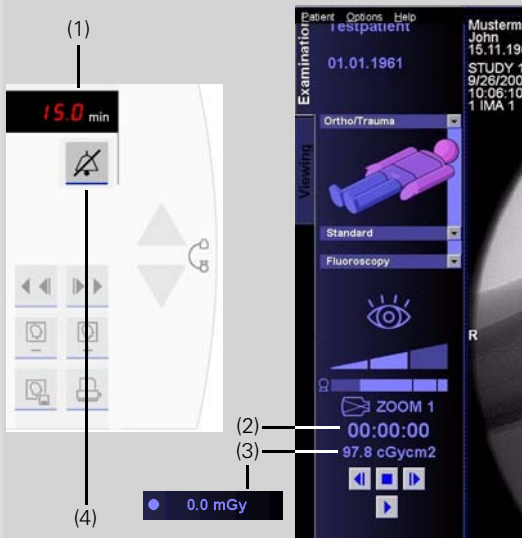

ADR stop is recommended, for example, for

- ❑ Thin objects, e.g. wrist (the movement causes the object to slide out of the central beam, the image is underexposed)
- ❑ Metal (high density of the metal leads to strong overexposure)
- ❑ Transition between thoracic and lumbar spine (movement of the diaphragm/midriff causes changes in the exposure).

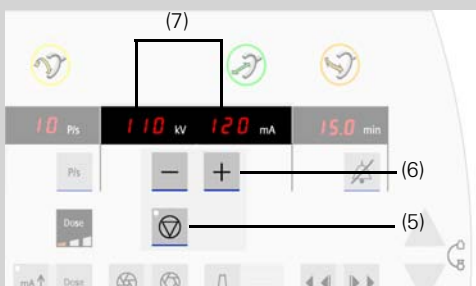

## Radiation time and dose display

- (1) Display of accumulated fluoroscopic time at the C-arm system
  - (2) Display of accumulated fluoroscopic time at the monitor trolley (**Examination** task card)
  - (3) Display of accumulated dose at the monitor trolley (with optional dose measuring chamber)  
*Alternative:* Display of air kerma values (preceding item: accumulated air kerma).
- After every five minutes of radiation, an audible alarm sounds at the C-arm system.
  - ✧ To deactivate the warning signal, press the button (4) on the C-arm system.

## Manual entry of radiation parameters

All exposures are taken with automatic exposure control.


This rule is turned off using **ADR stop**. The kV/mA values can then be selected manually.

- ✧ Select **ADR stop** at (5).
- ✧ If required, set a manual value with the **+/-** buttons (6).
- kV and mA values are shown on the display at the C-arm system (7).
- As long as **ADR stop** is activated, the manually set value remains unchanged.



In the DCM mode the **Power Mode** function is automatically selected.

(1)

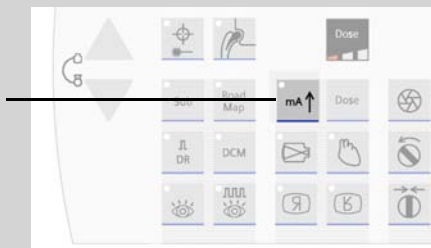

## Power mode

---

**Power Mode** is an additional function for the fluoroscopy mode.



With **Power Mode** a higher contrast is achieved, but with a higher dose.

- ✧ Select the **Power Mode** function at the C-arm system (1).
- If the **Power Mode** function is activated, a continuous warning signal sounds during fluoroscopy.
- The duration of the **Power Mode** function is limited to 15 s.

# Examination procedure



The rotation is performed without radiation and can be observed on the monitor.

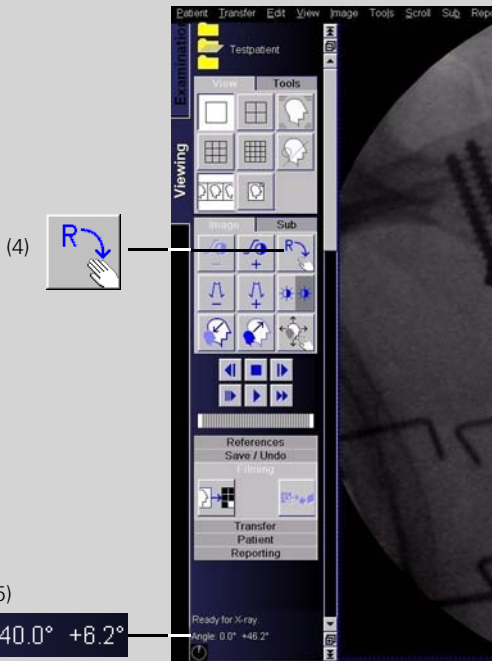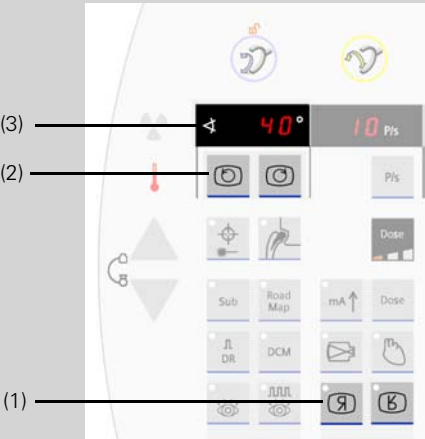



## Image rotation and reversal

### At the C-arm system


- ✧ Press one of the **image reversal** buttons to flip the image horizontally or vertically (1).
- The display of the fluoroscopic image is updated correspondingly.
- ✧ Press one of the **image rotation** buttons for the required direction of rotation (2).
- The angle of rotation in relation to the starting position is shown (3).

### At the monitor trolley

Image display and processing in the **Viewing** task card is possible only for stored images (e.g. single exposure) (in the **Examination** task card you can rotate images with the mouse at any time).

- ✧ Activate the image rotation function in the **Viewing** task card (4).
- ✧ Rotate the image with the left mouse (keep left mouse button pressed).
- Angle display in the control area (5):  
First value = angle of rotation in relation to starting position.  
Second value = angle of rotation in relation to last image setting.

# Examination procedure

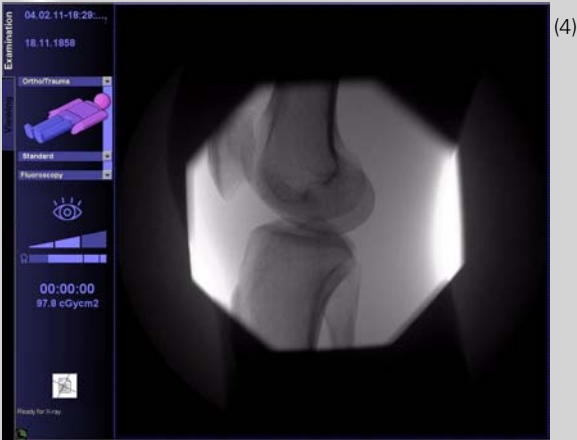

## Collimator setting

---

The diaphragms allow optimal collimation to a specific object. They can be set at the C-arm system.



- (1) Moves the iris diaphragm into/out of the beam path
- (2) Rotates the semitransparent diaphragm
- (3) Moves the semitransparent diaphragm into/out of the beam path

The iris diaphragm is a multileaf collimator. It is used preferably for collimating smaller objects in the image center.

- ✧ Activate the iris diaphragm for small objects, e.g. the wrists (1).
- The X-ray beam is limited to an octagon (4).

The semitransparent diaphragm acts as a density compensation. It is used to collimate to extremities, for example.

- ✧ Rotate the semitransparent diaphragm corresponding to the position of the object (2).
- ✧ Adapt the semitransparent diaphragm to the size of the object (3).
- A diaphragm is moved close to the object on both sides. This prevents overexposure at the edges of the object (5)

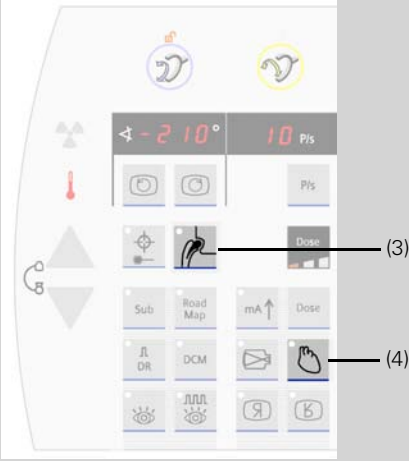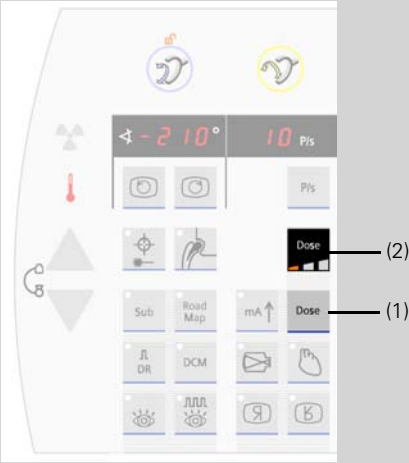

## Image Quality

---

### Selecting the dose level

You can select up to three different dose levels (reduced, standard, increased).

- ✧ Press the **dose level** button several times until the required value is reached (1).
- The currently set dose level is shown in the bar display on the monitor and in the segment display (2).

### Activating the metal function


If there is metal in the measuring area you can optimize contrast and brightness by activating the metal function.

- ✧ Press the **metal function** button (3).
- The LED is on when this function is selected.

### Lowering noise reduction

You can select a lower integration factor for exposures of fast moving objects. With normal noise reduction, a higher integration factor is selected (for very slow movements).

- ✧ When there is motion in the image, press the **Noise reduction factor** button (4).
- The LED lights up, noise reduction is lowered.

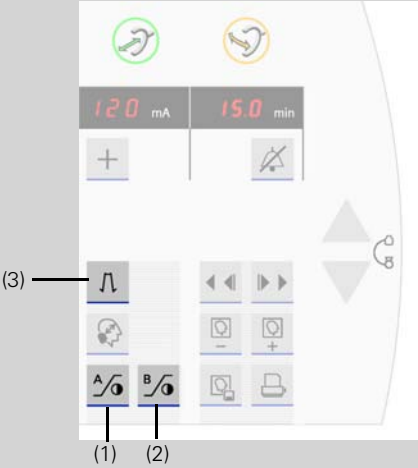

## Changing the contrast

---



If the image quality is insufficient, a different gray-level curve can be selected at the control panel of the C-arm system during the examination to change the contrast of the image (and all further images).

In addition, the edge enhancement of the live images can be changed.

- ✧ If necessary, repeatedly press the following buttons to change between preset values:
  - (1) Change contrast left monitor (**Examination** task card)
  - (2) Change contrast right monitor (**References** task card)
  - (3) Change edge enhancement left monitor (**Examination** task card)




At the end of radiation, the image last acquired is displayed (LIH, Last Image Hold). If radiation is released again, the LIH image is overwritten.

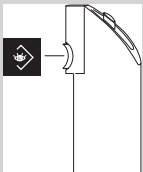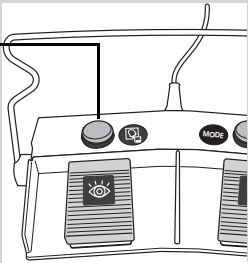

(1)

(2)

(3)

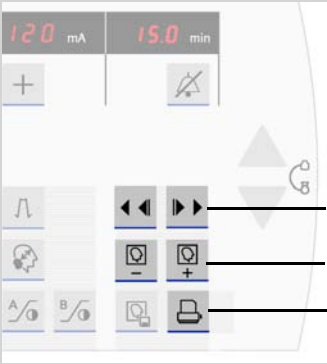

(4)

(5)

(6)



## Saving images

---

### Single exposure, Digital Cine Mode (DCM)

In these operating modes the generated images are automatically saved in the local database of the **Patient Browser**.


### Fluoroscopy, pulsed fluoroscopy, subtraction, Roadmap

In these operating modes images are stored in the temporary image memory and overwritten by new images.

- ✧ To manually save the current image, press one of the following buttons:
  - (1) **Save image** button on the multifunctional footswitch (option)
  - (2) **Save image** button on the hand switch
  - (3) **Save image** button on the C-arm system
- ✧ This image is displayed in the **References** task card and stored in the local database.

### Scrolling and printing

- ✧ Review image series as a movie in the **Examination** task card (4).
- ✧ Scroll backward/forward through the stored images in the **References** task card (5).
- ✧ Print out individual images from the **References** task card with a local printer (option) (6).

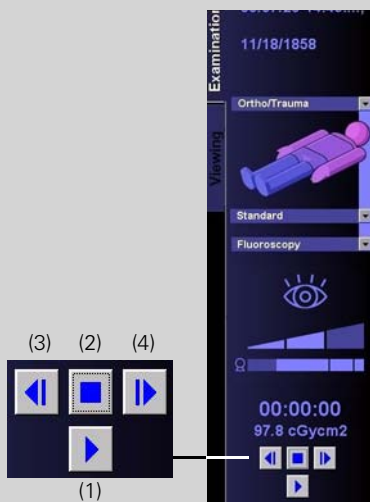

If **Autoloop** (option) is configured in the exam set used, review of the scene is started automatically at the end of radiation.



You can load the scene into the **Viewing** task card at any time and review it there.



If the MPPS option is installed, the **Modality Performed Procedure Step** window for performance documentation is now displayed automatically.



In the Configuration menu (**Options > Configuration > Transfer**), define the rules for auto transfer, e.g.:

- ☐ Required processing status
- ☐ Target addresses
- ☐ Data type

## Fluoro Loop/LSH (option)

---

In the fluoroscopy, subtraction and Roadmap modes, scenes can be reviewed and stored (Last Scene Hold) during the examination.

### Reviewing a scene

After radiation is ended, the buttons for controlling the scene review are displayed.

- (1) Start
- (2) Stop
- (3) Previous frame
- (4) Next frame.

### Storing the scene

As soon as the scene has been reviewed, it can be stored.

- ✧ Select **Patient > Save LSH Scene** in the main menu or press function key F9 on the keyboard.
- The current scene (up to 120 images) is stored in the local database.

## Ending the examination


---

- ✧ Select **Patient > End Examination** or press function key F4 on the keyboard.
- Patient and examination data are deleted from the **Examination** card.
- If **Automatic transfer** is active, the examination images are automatically saved to CD-R or sent to the information system (option).

# Subtraction and Roadmap



The **Subtraction** and **Roadmap** modes are an option for C-arms used in cardiac and vascular surgery.

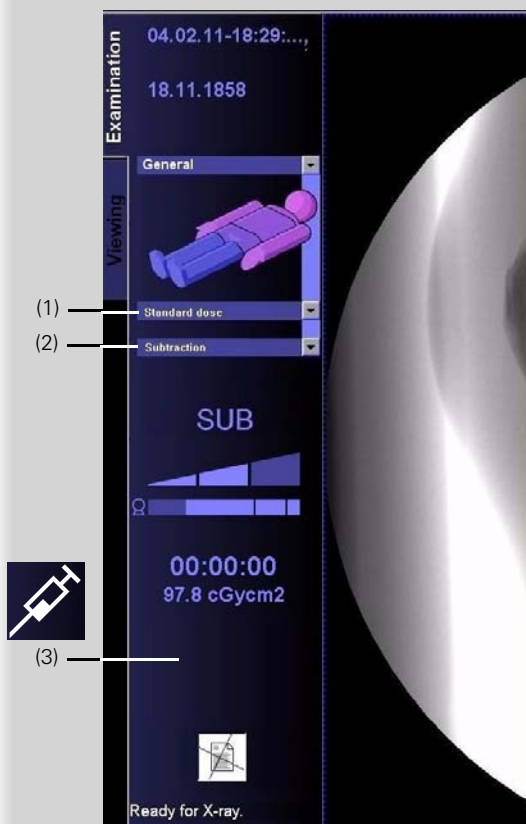

## Performing a subtraction scene

Contrast medium injected into the vessels helps to show vessels and changes of/in these vessels (e.g. aneurysms, ruptures).

### Procedure

✧ Prepare the examination in the **Examination** task card:

(1) Selection of the required application program

(2) Selection of the **Subtraction** mode

✧ Trigger the subtraction scene with the footswitch or the hand switch.

The footswitch or hand switch must remain pressed during the entire series. If the series is interrupted, it must be started again from the beginning.

(3) The syringe symbol appears in the **Examination** task card. The physician now injects the contrast medium.



➡ After a few seconds the syringe symbol disappears again. The physician can end the contrast medium injection. The contrast medium bolus remains displayed.

# Subtraction and Roadmap



If **auto store** is activated in the configuration menu, the images of a subtraction scene are automatically saved in the local database. They can then be retrieved for postprocessing at the end of the examination.

(1)

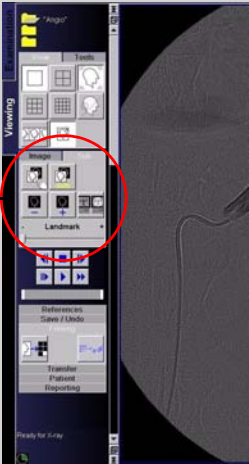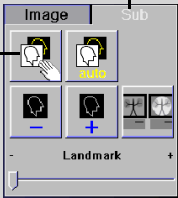

## Postprocessing a subtraction scene

---



- ✧ Load the subtraction scene from the **Patient Browser** into the **Viewing** task card, if required.

### Pixelshift

**Pixelshift** allows you to make the mask and fluoroscopy image coincide.

This function is used if the position of the patient has changed in the course of the series in relation to the position of the mask.

- ✧ Click the **Pixelshift** button (1).
- The mouse pointer appears as an arrow.
- ✧ Using mouse clicks, move the mask and fluoroscopy image so that one is on top of the other.
- In the lower image area it is indicated by how many pixels the mask was shifted in the x-plane (= to the left or right) or the y-plane (= up or down).

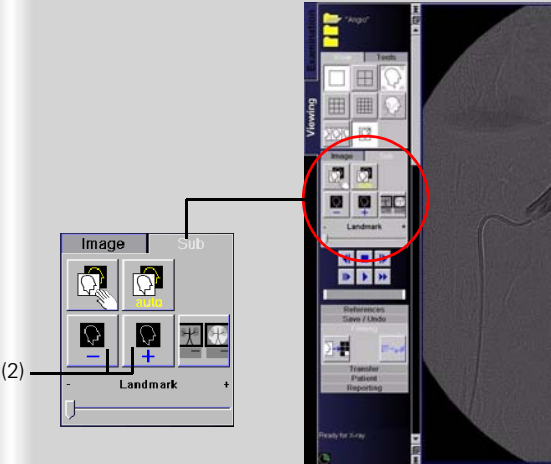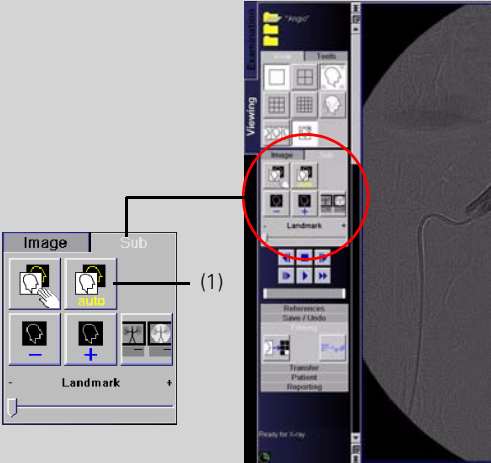



## Auto Pixelshift


This function allows automatic pixelshift for a selected region.

- ✧ Click the **Auto Pixelshift** button (1).
- The mouse pointer changes into a square.
- ✧ With the left mouse button pressed, move the square to the location where you want to achieve coincidence.
- ✧ Release the mouse button again.
- The mask and fluoroscopy image are made to coincide optimally in the marked area.
- The shift of the mask in the x- and y-axis is indicated in the bottom right image area.


## Selecting a different mask

The selected application program defines which of the generated images is used as the mask in the subtraction series. This image is then subtracted from all following images.

- ✧ Click on **Mask +** (Next) or **Mask –** (Previous) (2).
- The mask for this series is changed in individual steps. This change is automatically adopted for the entire series.

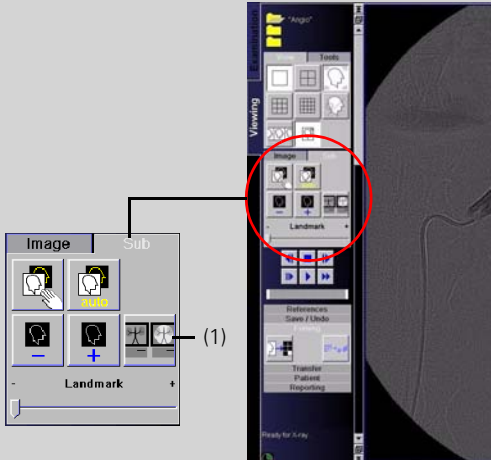

(2)

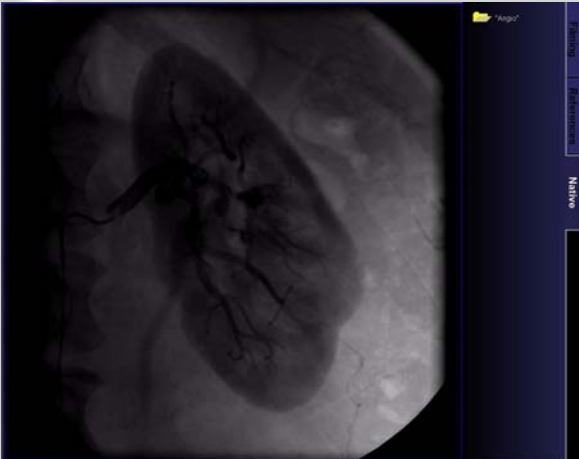

## Dual channel function

With this function the entire series is displayed unsubtracted during postprocessing in the **Native** task card (on the right-hand monitor).

At the same time, the subtracted display is shown in the **Viewing** task card (on the left-hand monitor).

- ✧ Click the **Dual channel function** button (1).
- The entire series is additionally shown unsubtracted on the right-hand monitor, even when scrolling through individual images of the series.



## Native display in the Native task card

The image shown in the **Native** task card directly corresponds to the image of the series shown in the **Viewing** task card (2).

- ✧ Scroll through the individual images of the series in the **Viewing** task card.
- The **Native** task card always shows the corresponding image unsubtracted.



(1)

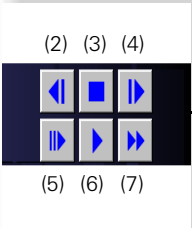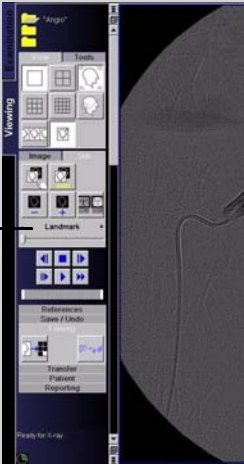

## Landmark

The **Landmark** function allows you to subsequently add an anatomical background for orientation purposes (0 to 30 %).

- ✧ Keeping the left mouse button pressed, drag the bar to the required value (1).

## Movie mode

The replay of the subtraction scene can be repeated in the **Viewing** task card.

- ✧ Select the required function with the mouse:
  - (2) Scroll image back
  - (3) Stop the movie function
  - (4) Scroll image forward
  - (5) Replay series at half the speed
  - (6) Replay series in real time
  - (7) Replay series at double speed



During catheter placement the images are not automatically stored.

To manually save images, use the save button on the hand switch, on the multifunctional footswitch (option) or on the C-arm system.



It is not necessary to create a subtraction scene if the Roadmap exam connects to a subtraction angiography. The existence of a subtraction screen is then indicated by a screen icon.

SUB



- ✧ In this case, press the ROADMAP button on the control panel *once*.
- ✧ Immediately start catheter positioning under fluoroscopy control.

## Roadmap

---

The Roadmap mode is also used in vascular surgery. This mode is used to place catheters in vessels under fluoroscopy.

The examination comprises the following steps:

### Generation of a subtraction scene

- ✧ Select the Roadmap operating mode in the **Examination** task card.

The procedure is the same as that described in Section *Performing a subtraction scene*.

- ❑ First, a mask is generated.
- ❑ Then, the vessel is filled with contrast medium and displayed using subtraction technique.


### Catheter positioning in the vessel

- ❑ If radiation is released again, the catheter placement is shown in real time in the **Examination** task card.


# Postprocessing



Images are postprocessed in the **Viewing** task card.

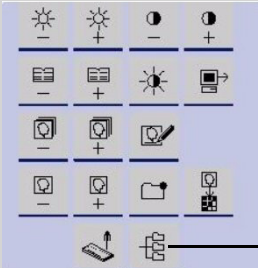


(1)

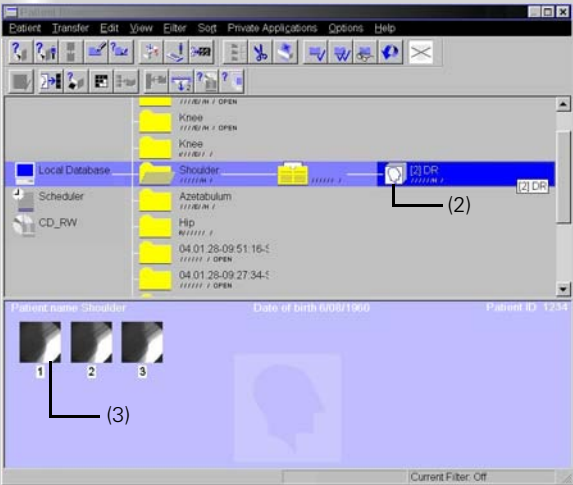

(3)

(4)

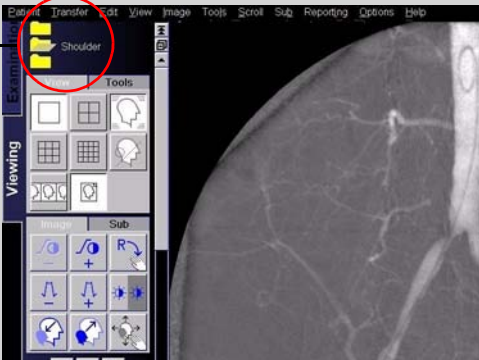





## Loading patient images into the Viewing task card

---

- ✧ Open the **Viewing** task card.
- ✧ Open the **Patient Browser** with the **Call up Patient Browser** button on the monitor trolley (1).
- ✧ Load the required series into the **Viewing** task card with a double click (2).
- ✧ To load individual images, double-click on the image symbol (3).
- ➡ The name of the patient is displayed in the control area of the **Viewing** task card (4).

(1)

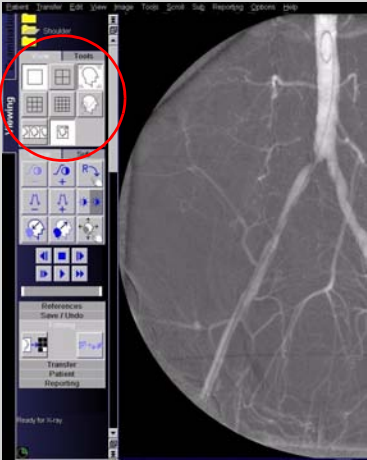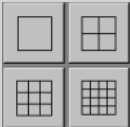


(2)



(3)






(4)

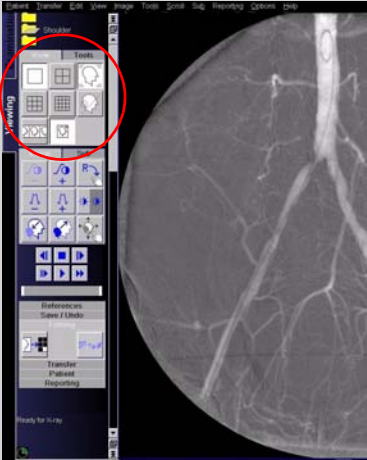

## Image display

In the **View** subtask card you can choose between different monitor layouts.

- (1) Different screen divisions
- (2) Hiding graphics and patient data in the image area
- (3) Stripe display:  
the images of a series are arranged *next to each other*
- (4) Stack display:  
the images of a series are arranged *on top of each other*

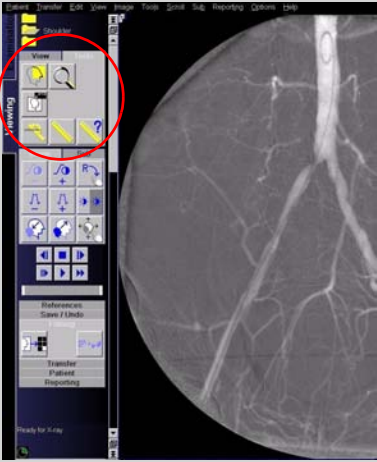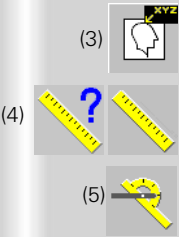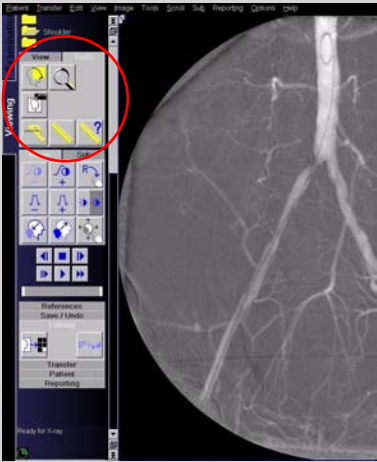

## Measuring and annotations

---

In the **Tools** subtask card images can be measured and annotations can be added.

(1) Diaphragms

The subsequent simulation of diaphragms (drawn in with the mouse) improves the visualization of fine structures that are difficult to see in the image.

(2) Magnifying glass

Individual areas of the loaded image are shown enlarged at the mouse position with the left mouse button pressed

(3) Annotations

Selecting predefined or entering free annotations for image areas via the keyboard (with marking arrow)

(4) Calibrating and subsequently measuring distances


(5) Angle measurement

The angle between two straight lines to be drawn is indicated


# Postprocessing



Distances cannot be measured directly in the images, since the position of the object in the beam path and thus the magnification effect is not clear. A calibration must be performed first before a distance can be clearly determined.

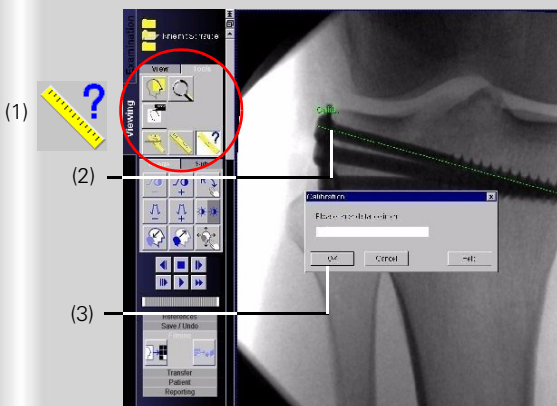

The calibration object must be perpendicular to the central ray in the area of the structure to be measured (generally in the center of the measuring field to avoid I.I. distortion).

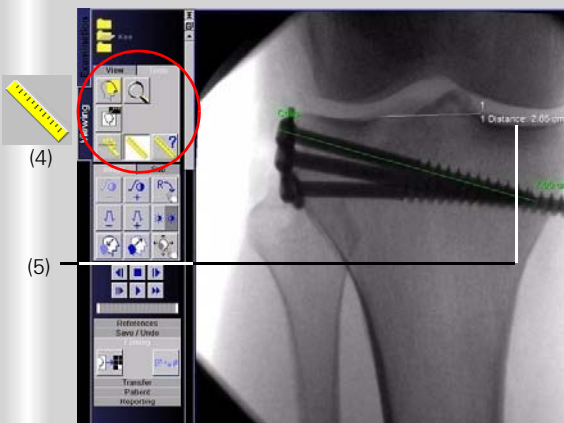


## Calibrating and measuring distances

### ❑ Calibrating (1st step)

- ✧ Activate the **Calibration** function by clicking the corresponding button (1).
- A line appears in the image area which can be lengthened, shortened and positioned as desired with the mouse (2).
- ✧ Draw the line along a known distance (2).
- As soon as you release the mouse button, a dialog box appears (3).
- ✧ Enter the known distance and confirm with **OK** (3).
- The calibration is shown in the image area. At the same time, a measuring scale appears on the right edge of the image.

### ❑ Measuring distances (2nd step)

- ✧ Activate the **Distance** function by clicking the corresponding button (4).
- ✧ Using the left mouse button, draw a line along the required structure.
- As soon as you release the left mouse button, the distance from the start to the end point of this line is shown (5).

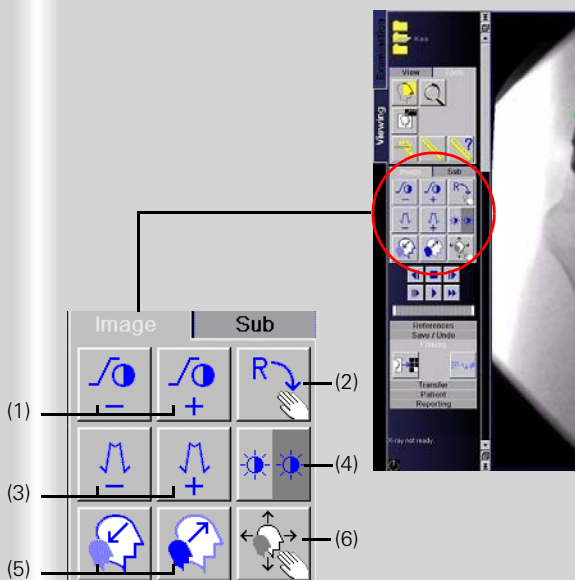

Edge enhancement (3) means artificially increasing the difference between two gray levels.



## Image manipulation

---

Images can be postprocessed in the **Image** subtask card.

- ✧ Prior to postprocessing, activate the required function by clicking the corresponding button:
- (1) Change of contrast  
The contrast is changed in four defined steps
- (2) Image rotation  
Rotation with the left mouse button pressed
- (3) Edge enhancement  
Edge enhancement is increased/reduced in steps of ten
- (4) Grayscale inversion  
Change from positive to negative image
- (5) Double/half image size
- (6) Zoom/pan the image  
Mouse at image edge: change image size  
Mouse in image center: pan image



Windowing means changing the gray levels in an image and thus the brightness (center of the grayscale) and contrast (width of the grayscale) of the images.



E 10 %	(2)
W 1602	(3)
C 1372	

## Windowing

- ❑ With buttons/softkeys
  - ✧ Select the preset contrast levels by clicking the buttons on the **Image** subtask card  
(→ Page 65).
  
- ❑ With the keyboard of the monitor trolley
  - ✧ Select the brightness and contrast step by step (1).
  
- ❑ With the mouse on the monitor trolley
  - ✧ With the middle mouse button pressed, move the mouse in the image.  
Up/down movement changes the brightness  
Movement to the left/right changes the contrast

## Display of window values




Edge enhancement and gray values of the image are displayed in the lower image area:

- (2) Edge enhancement
- (3) Grayscale window
  - W = window width (contrast)
  - C = window center (brightness)



In radiology the terms "filming" (= printing process), "camera" (= output device) and "exposing" (= printing) are used for the printing of patient images.

The *syngo* user interface uses corresponding terms.

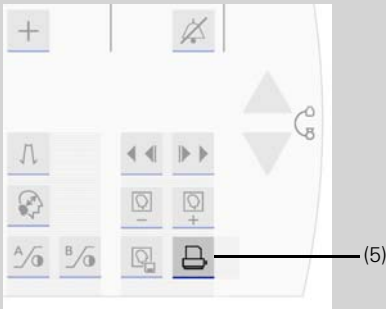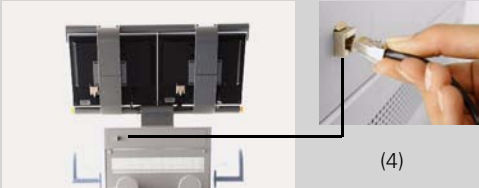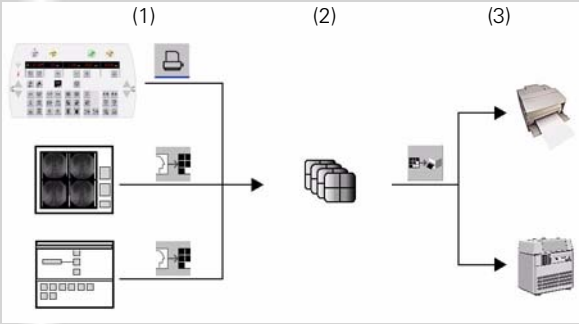

## Printing

---

If the printing function is configured, the **Filming** task card additionally appears on the right monitor.

Here, the images to be printed are collected in film sheets, processed if necessary, and then sent to the printer as a film job.

### Procedure



- (1) Copying images to the film sheet:
  - from the C-arm system
  - from the **Viewing** task card
  - from the **Patient Browser**
- (2) Editing/checking the film sheet:  
in the **Film Preview** dialog or in the **Filming** task card
- (3) Printing the film job:
  - on a local printer
  - on a network printer

With a local printer you can print individual images on paper or film directly in the OR.

Printing in the network is possible if a network printer (e.g. central printer in the OR or the radiology department) is connected via the network connection (4).

### Copying images to the film sheet from the C-arm system (for local printing)

- ❖ Press the **Print** key on the control panel of the C-arm system (5).
- The image shown on the right monitor (**References** task card) is copied to the film sheet.
- The local printer is preset as output device for the print job.

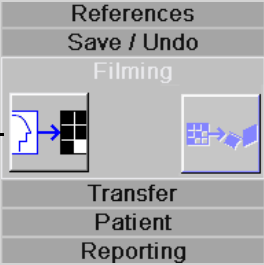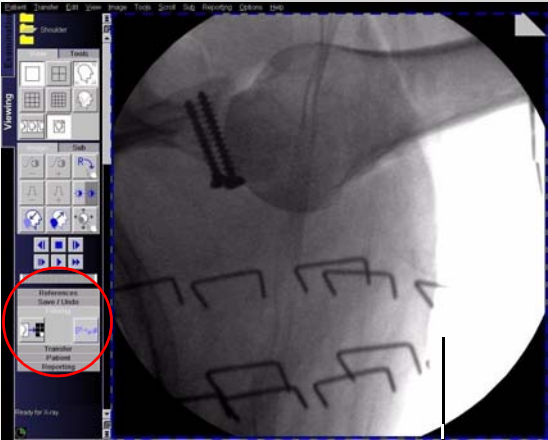


(1)

(2)



(4)

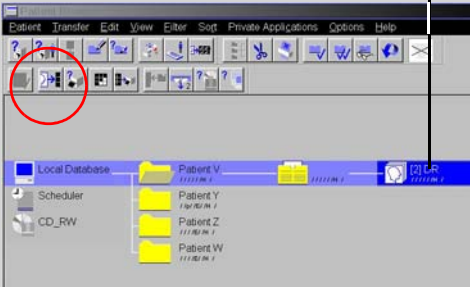

(3)

## Copying images to the film sheet from the Viewing task card



Print jobs can be created in the **Viewing** task card in parallel with image postprocessing.

- ✧ Click the patient image to be copied to the film sheet (1).
- ✧ Then click **Copy to Film Sheet** (2).

## Copying images to the film sheet from the Patient Browser

If the complete data record of a patient is to be printed on film, this can also be done directly from the **Patient Browser**.



- ✧ Click the series to be printed in the local database of the **Patient Browser** (3).
- ✧ Copy the patient images to the film sheet (4).

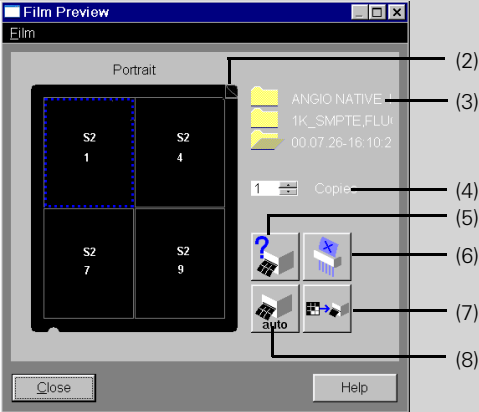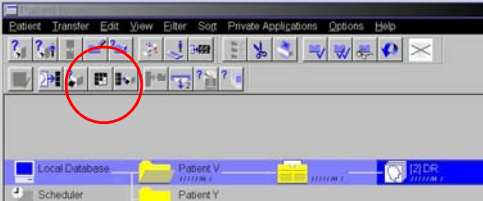






## Checking the film job and printing from the film preview

- ✧ Click the **Film Preview** button in the **Patient Browser** (1).
- A dialog box is opened which shows different functions for the film sheet:
  - (2) Dog ears for scrolling through the film sheets
  - (3) Patient name
  - (4) Setting the number of copies of a film job
  - (5) Display of the status of individual film jobs, e.g. "queued", "completed" etc.
  - (6) Deleting individual images from the film sheet
  - (7) Sending the film job and exposing/printing the film
  - (8) Automatic sending of a film job when film sheet is full
- ✧ Click **Expose** to send the film job to the printer/camera (7).

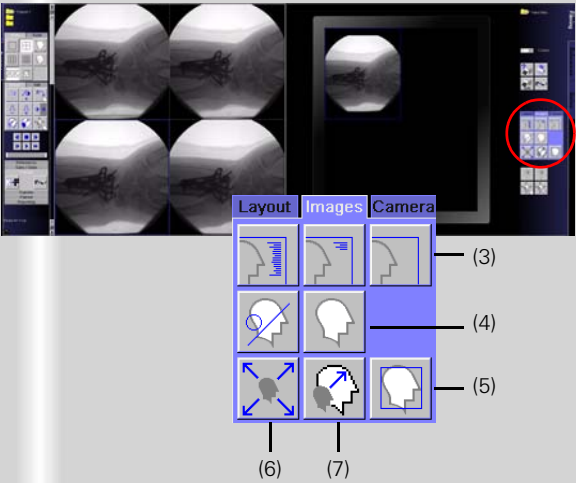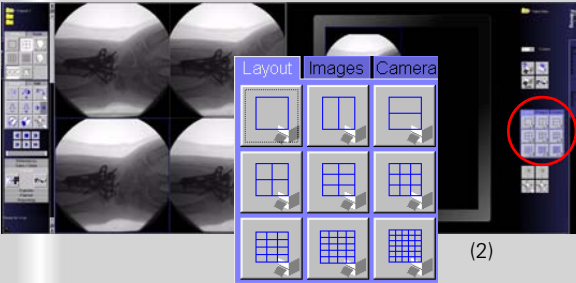

## Editing the film sheet in the **Filming** task card

- ✧ Click the **Filming** task card on the right monitor (1).
  
- Layout
  - ✧ Select the required film layout in the **Lay-out** subtask card (2).
  
- Image display
  - ✧ On the **Images** subtask card, select the required display of the images on the film:
    - (3) Select text to be printed on film  
All patient text (name, date of birth etc.),  
customized text or no text
    - (4) Show or hide graphics (e.g. distance,  
angle measurements)
    - (5) Enlargement of the image so that the  
shorter sides fill the film segment. Parts  
can be cut off from the longer sides.
    - (6) Adjust the image size to the film segment
    - (7) Return to the original image

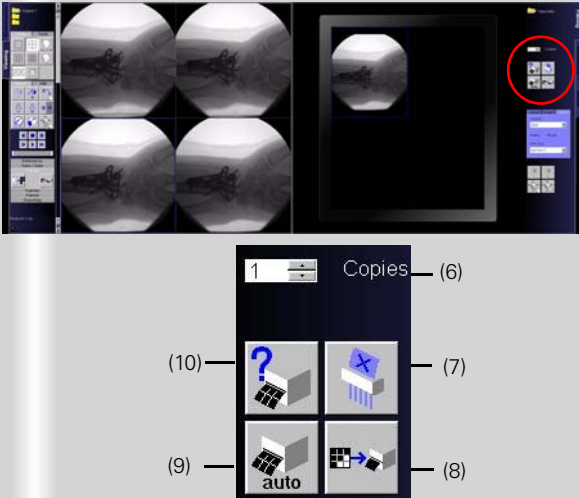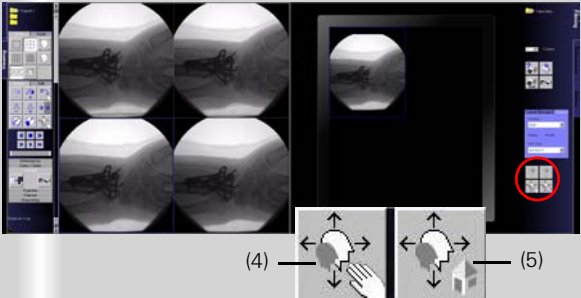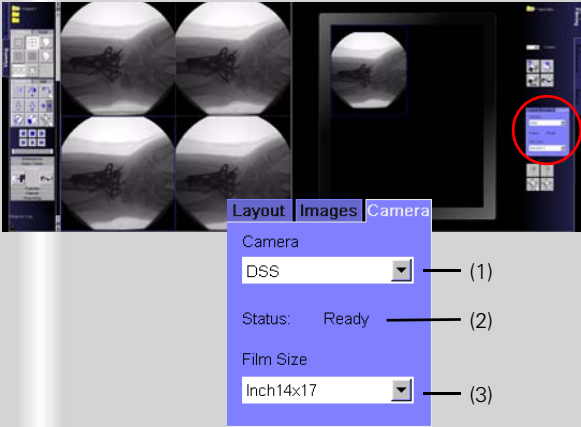

- ❑ Camera/printer setting
  - ✧ In the **Camera** subtask card, select a different camera/printer or film size, if necessary:
    - (1) Select the camera if several cameras are configured
    - (2) Display of the film job status, e.g. "queued", "printed" etc.
    - (3) Select one of the film formats available in the camera
- ❑ Zoom/Pan
  - ✧ Activate the function by clicking the corresponding button (4).
  - ✧ Zoom/pan the image with the left mouse button pressed.  
Mouse at image edge: change image size  
Mouse in image center: pan image
  - ✧ If required, reset the image to the original position and size (5).

## **Printing a film job from the Filming task card**

- ✧ Set the number of copies (standard = 1 copy) (6).
- ✧ If necessary, delete individual images from the film sheet (7).
- ✧ Send the film job to the camera manually (8) or activate automatic exposure (9).
- ✧ If necessary, check the processing of the film job (10).
- The status ("queued", "printed" etc.) of all film jobs of the selected camera is shown.




# Documentation



Only non-rewritable CDs, i.e. CD-Rs, can be used. Rewritable CDs (CD-RWs) are not accepted.



The DICOM viewer is started directly from the CD; no files are installed on the computer.

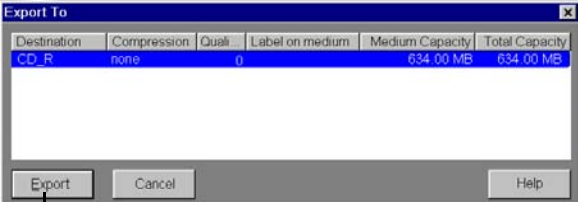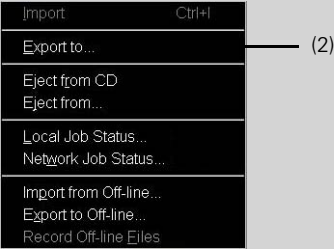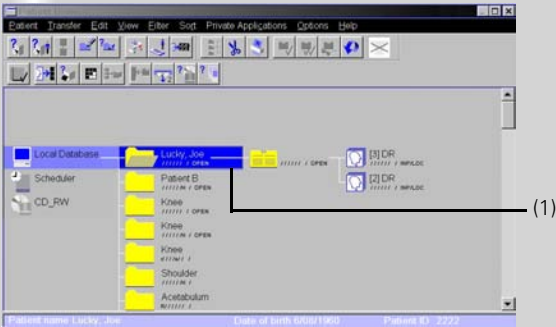

## Burning CDs

---

As your system is configured for multi-session, you can store your data to unrecorded CD-Rs, or CD-Rs that have already been written to. The new data is added to the old data on the CD-R.

 
 
### ❑ DICOM Viewer

In the first session, a DICOM viewer is written to the CD together with the image data. This allows you to view the images stored on the CD on any computer.

## Exporting workflow

- ✧ Click the patient(s) in the **Patient Browser** (1).
  
- ✧ In the menu bar of the **Patient Browser**, click **Transfer > Export to...** (2).
- ➡ The dialog window for data export is opened.
  
- ✧ Select the CD-R as the target and click **Export** (1).
- ✧ The export process starts. The CD is automatically labeled with the date and time.

# ARCADIS Avantic Quick Guide





## Generating reports

---

If the reporting function is enabled on your system, important examination data are automatically compiled into a structured report for documentation purposes.

### Report types

- ❑ Radiation summary report  
contains the accumulated values of the examination for the number of exposures, fluoroscopy time and dose area product

### Using reports

You can read, print and send the reports.

### Managing reports

Reports are stored and managed in the **Patient Browser** as additional data objects in 2 formats. They can be selected via the relevant icons like examination images:

- (1) Report icon in the navigation area
- (2) Report icon in the content area  
Format: Structured Report (SR)  
To open the Report Editor
- (3) Report icon in the content area  
Format: Secondary Capture (SC)  
Loading e.g. into Viewing possible; PACS-compatible

# Reports



In the **Viewing** task card you can open reports by clicking the relevant button on the **Reporting** subtask card.



(1)

(2) **Radiation Summary Report**  
POSTPROCESSING REPORT

**PATIENT**

Name:   
First name:   
Pat-ID:   
Date of birth:  Age:  Years  
Sex: ☒ male ☐ female ☐  
Weight:  kg  
Height:  cm

**STATUS INSTITUTION**

Completion flag:   
Verification flag:   
Hospital:   
ZIP City:   
Street Street No:   
Country:   
Phone:  Phone No:

(3) **RADIATION DATA**

Start of examination:    
End of examination:    
Total number of exposures:   
Cumulative fluoro time:  hh:mm:ss  
Cumulative area dose product:  cGycm2

(4)

(5)



With this button in the Report Editor you can call up the print preview of the report.



## Opening and printing reports

### Opening a report

- ✧ Mark the required report in the **Patient Browser**.
- ✧ Select **Reporting > Open Report**.
- ✧ The report is opened in the Report Editor.

### Report Editor

- (1) **Print Report** button
- (2) Status area (report status)
  - Examination report (treatment in process)
  - Postprocessing report (treatment finished)
- (3) Content area
- (4) Button area



### Setting the report status

- ✧ Select the applicable status in the selection lists of the status area (2).
- ✧ Click **Apply** (5).

### Printing

A report must have the „verified“ status before it can be printed.

- ✧ Click **Print Report** (1).
- ✧ Click **OK** in the dialog window displayed.

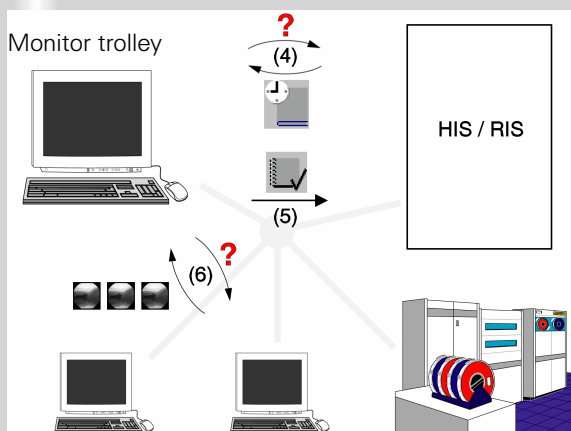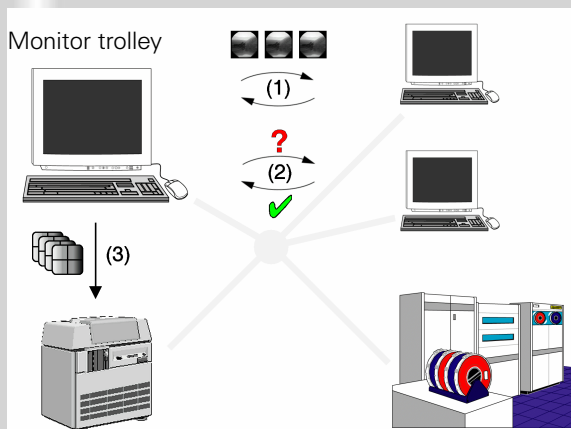

ARCADIS can optionally be connected to a network. The following two variants are available:

## **DICOM System Basic**

### **Send/Receive + Storage Commitment, Print**

- (1) Send/Receive  
Sending and receiving of patient images
- (2) Storage Commitment  
Requesting a confirmation that images have been securely stored after sending
- (3) Print  
Printing of patient images on X-ray films via a network  
→ Page 69

## **DICOM System Advanced**




### **(in addition to the above-named functions)**

- (4) Worklist  
Querying the worklist (all patients for a system) and loading the patient data
- (5) MPPS = Modality Performed Procedure Step  
Feedback to an information system about the status of a work process
- (6) Query/Retrieve  
Searching for images in the network (incl. other modalities), importing of images into the local database

# Connectivity



You can also receive images from another system (CT, MR etc.) or workstation. For this, the images have to be actively sent from this system or workstation to ARCADIS.

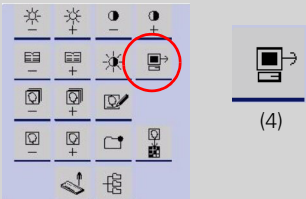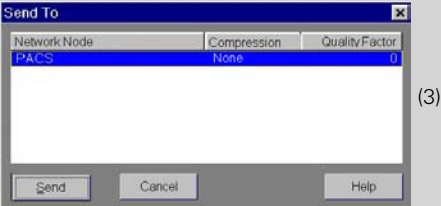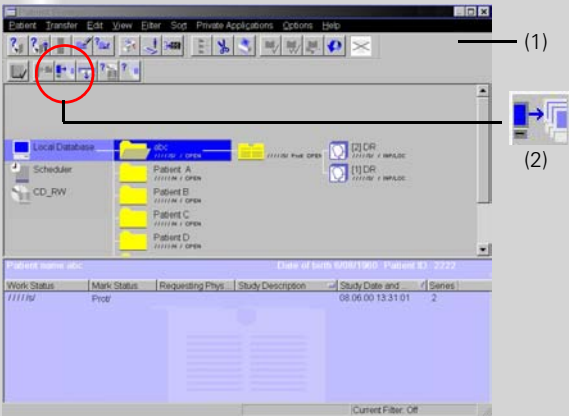

## Send/Storage Commitment

---

The **Send to** function allows you to archive patient images in an information system or to send them to another workstation for post-processing.




### Send to

- ✧ Open the **Patient Browser** (1).
- ✧ Select the patient (or individual examinations) whose data you want to send.
- ✧ Click the **Send to...** button (2).
  
- ✧ Select the network node (recipient) and confirm with **Send** (3).
- The images are sent to the selected address (information system or workstation).

### Sending to a standard address

- ✧ Press the **Send** key on the symbol keypad of the monitor trolley (4).
- The selected patient images are sent to the first "standard" node configured by Siemens Service.

# Connectivity

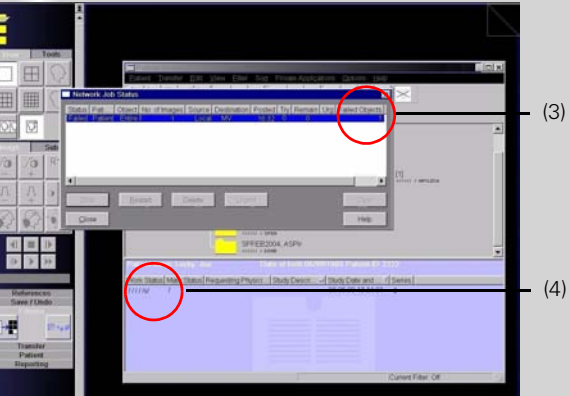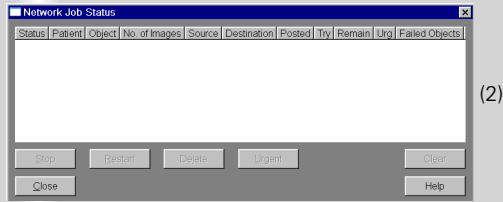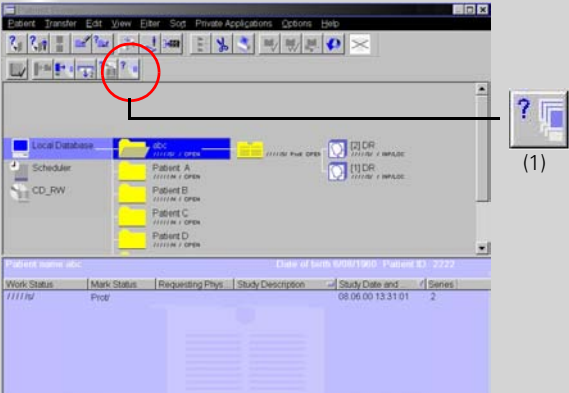



## Tracking network processes

- ✧ Click the **Network Status** button (1).

- Current processes in the network are shown (2).

## Storage Commitment

If patient data are sent or archived in an information system, the **Storage Commitment** function requests a confirmation from the receiving station that images have been securely stored (confirmation is not necessarily sent promptly):

(3) Column for error messages

(4) Feedback in the status bar  
("SV" = sent and verified)

- In the case of an error message, the data in the **Patient Browser** must not yet be deleted, because they have not yet been properly saved or archived.
- ✧ Repeat the process again.




**Get Worklist** offers the advantage of a simplified workflow:

In an information system, the OR plan (i.e. which patients are planned for a certain operating room or C-arm) can be prepared a day ahead and retrieved in the OR.

The patient data can then be retrieved just before the intervention and transferred to the **Examination** task card.

The **Get Worklist** function also prevents the entry of incorrect patient data, since the data do not need to be entered manually.

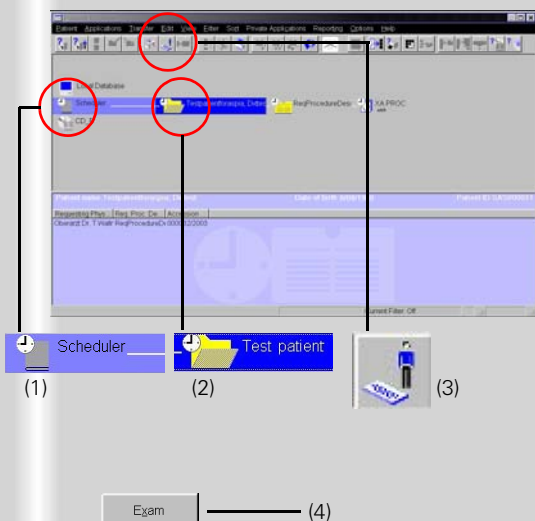


To update the worklist again, initiate a new request to the information system by double-clicking on the Scheduler.

## Get Worklist


---

The **Get Worklist** function contains a request for a worklist within an information system.

- ✧ Double-click the **Scheduler** in the **Patient Browser** (1).
- A worklist containing the patients to be examined at this system appears.
- ✧ Select the patient to be examined in the **Scheduler** (2).
- ✧ Click the **Patient Registration** button (3).
- The **Patient Registration** window opens. The data of the selected patient have already been entered.
  
- ✧ Click **Exam** in the **Patient Registration** window (4).
- The data are transferred to the **Examination** task card, and the examination can be started.

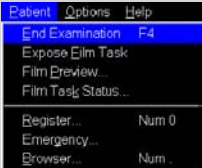


(1)

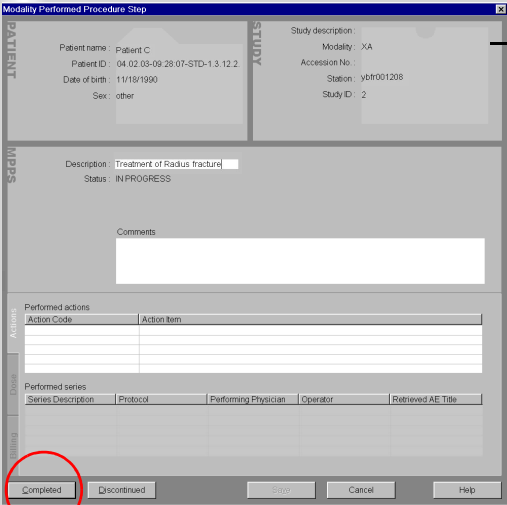

(2)

Completed (3)

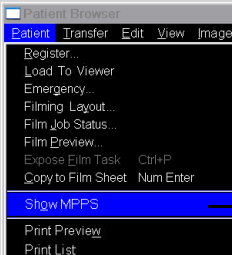

(4)

## MPPS – Modality Performed Procedure Step

---

MPPS (Modality Performed Procedure Step) is a confirmation to an information system that a certain process (in this case the examination of a patient) has been completed.

### Calling up MPPS after an examination

- ✧ Select **Patient > End Examination** in the **Examination** task card (1).
- The MPPS dialog is displayed (2).
- ✧ If desired, enter information and comments on the procedure (e.g. unusual occurrences, complications).
- ✧ To end the dialog, click **Completed** (3).
- The OR documentation is sent to the information system, where it is archived.
- The patient is deleted in the Scheduler.

### Calling up MPPS manually

If you have accidentally closed the patient by registering a new patient, you can open the MPPS dialog manually.

- ✧ Select **Patient > Show MPPS** in the menu bar of the **Patient Browser** (4).


# Connectivity



The *Retrieve* function is important above all for preoperative images that are needed for virtually any procedure.



(1)

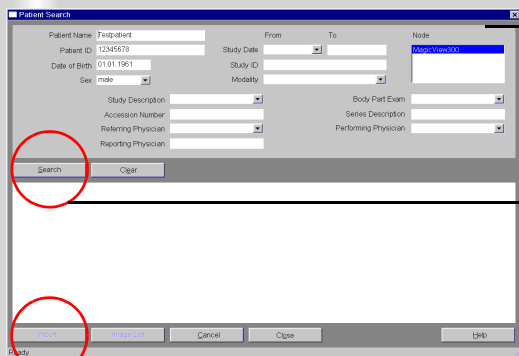

(2)

(3)

(4)

## Query/Retrieve

---

### ❑ Query

A query to an information system can be started. If the patient is already known to the information system, the existing images are displayed.

### ❑ Retrieve

Images can be imported into the local database and loaded into the **Viewing** task card.

✧ Click the **Search** button in the **Patient Browser** (1).

➤ The search dialog opens (2).

✧ Enter the known patient data (unknown data can be replaced by the \* wildcard, e.g. A\*).

✧ Start the search by clicking **Search** (3).

➤ The patient images present in the information system are displayed.


✧ Click the **Import** button (4).

➤ The patient images are imported into the local database from where they can be loaded into the **Viewing** task card.

# Dismantling




The C-arm can only be moved while it is switched on.

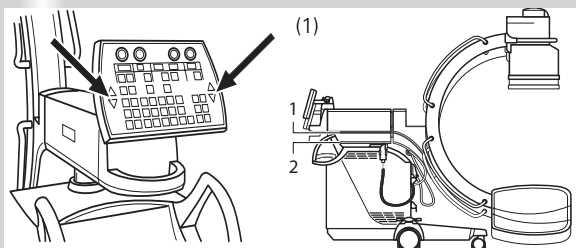

(2)



To define the switch-on duration yourself, you can perform a full shut-down manually. To do so, select **Options > End session** in the main menu before turning the system off.

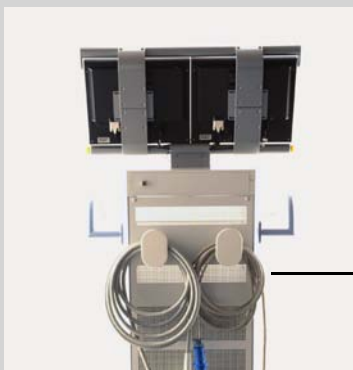

(3)



## Transport position

---

The C-arm system should be transported and parked in a zero position.

- ✧ Move the C-arm to the 0 position for angulation, horizontal movement and swivel.
- ✧ Move the C-arm into an orbital a.p. position.
- ✧ Move the lifting column all the way down into position 2 (1).
- ✧ Lock all electronic brakes.

## Switching off

---

- ✧ Switch the unit off at the monitor trolley (2).
- The imaging system is shut down and switched off in the "hibernate" state. Switching the system back on takes approx. 45 secs. until it is fully operational.
- The 16th time the system is switched off, it is automatically completely shut down. Switching the system back on then takes approx. 3 mins. until it is fully operational.
- ✧ Disconnect the monitor trolley from the C-arm system.
- ✧ Roll up the cables at the rear of the monitor trolley (3).
- The C-arm system is ready for transport.



*Your opinion matters a lot to us!*

We make every effort to continuously improve our product documentation.

Therefore, we would like to offer you the opportunity of giving us your direct feedback concerning your requests, suggestions and criticism with respect to this Quick Guide.

- ☐ For feedback by fax, please use the following fax number:

**+49 9131/84-2378**

- ☐ If you prefer notification by e-mail, please send your feedback to:

**sp\_ga.med@siemens.com**

Thank you very much for supporting us in our efforts to improve our products.

Siemens reserves the right to modify the design and specifications contained herein without prior notice.

Please contact your local Siemens Sales Representative for the most up-to-date information.

Note: Original images always lose a certain amount of detail when reproduced.

Siemens AG  
Wittelsbacherplatz 2  
D-80333 München, Germany

**Contact:**

Siemens AG, Medical Solutions  
Special Systems  
Henkestraße 127  
D-91052 Erlangen, Germany

© 2007 All rights reserved

Print No.: SPR2-330.622.01.01.02

Printed in the Federal Republic of Germany

Siemens AG 01/07